

FIG. 1

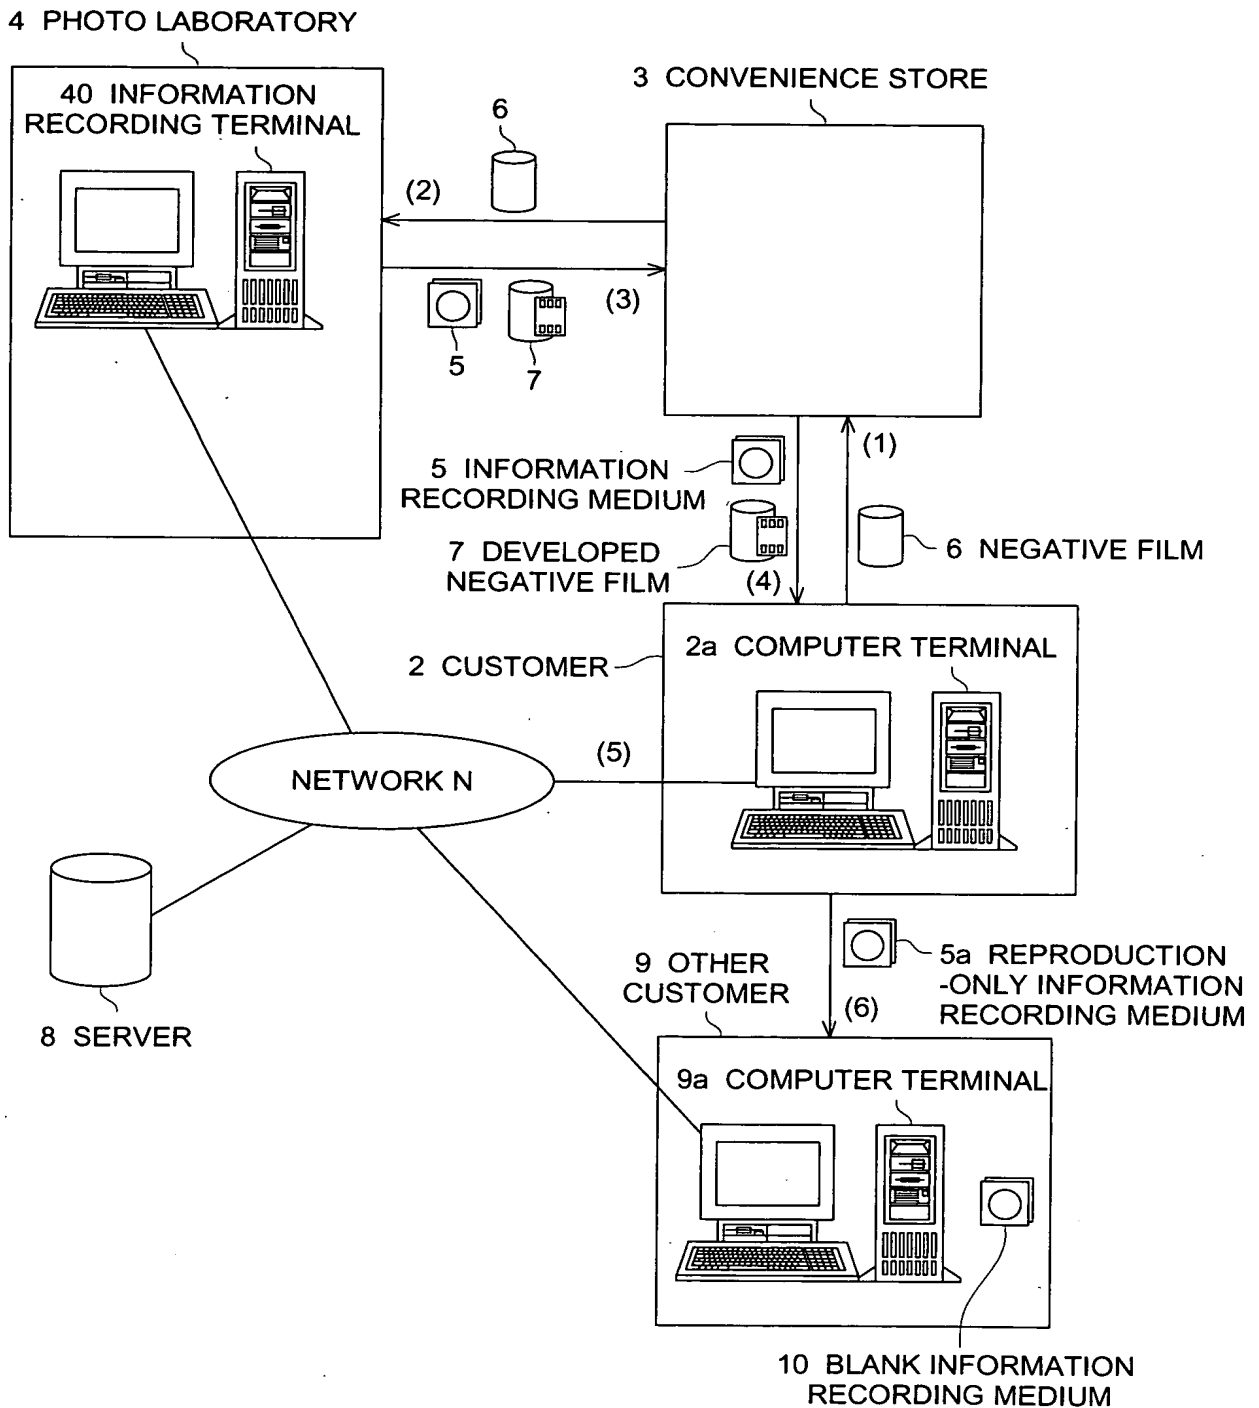


FIG. 2

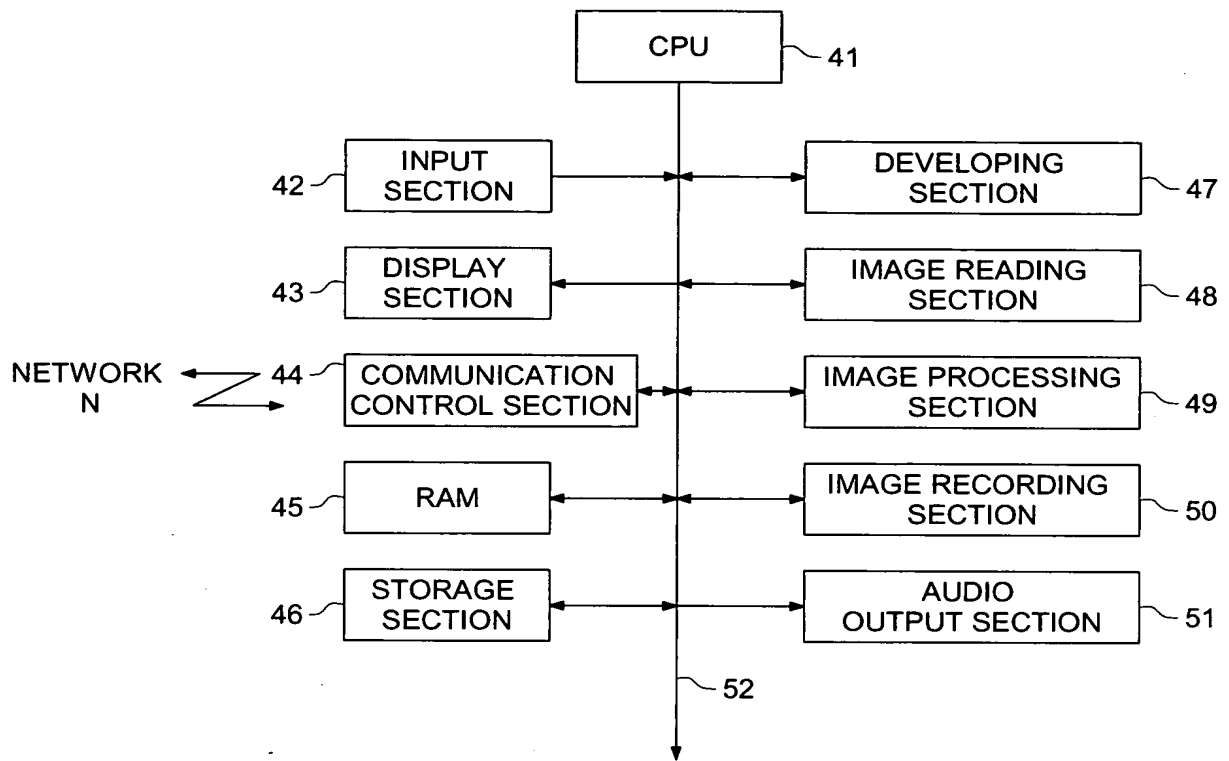
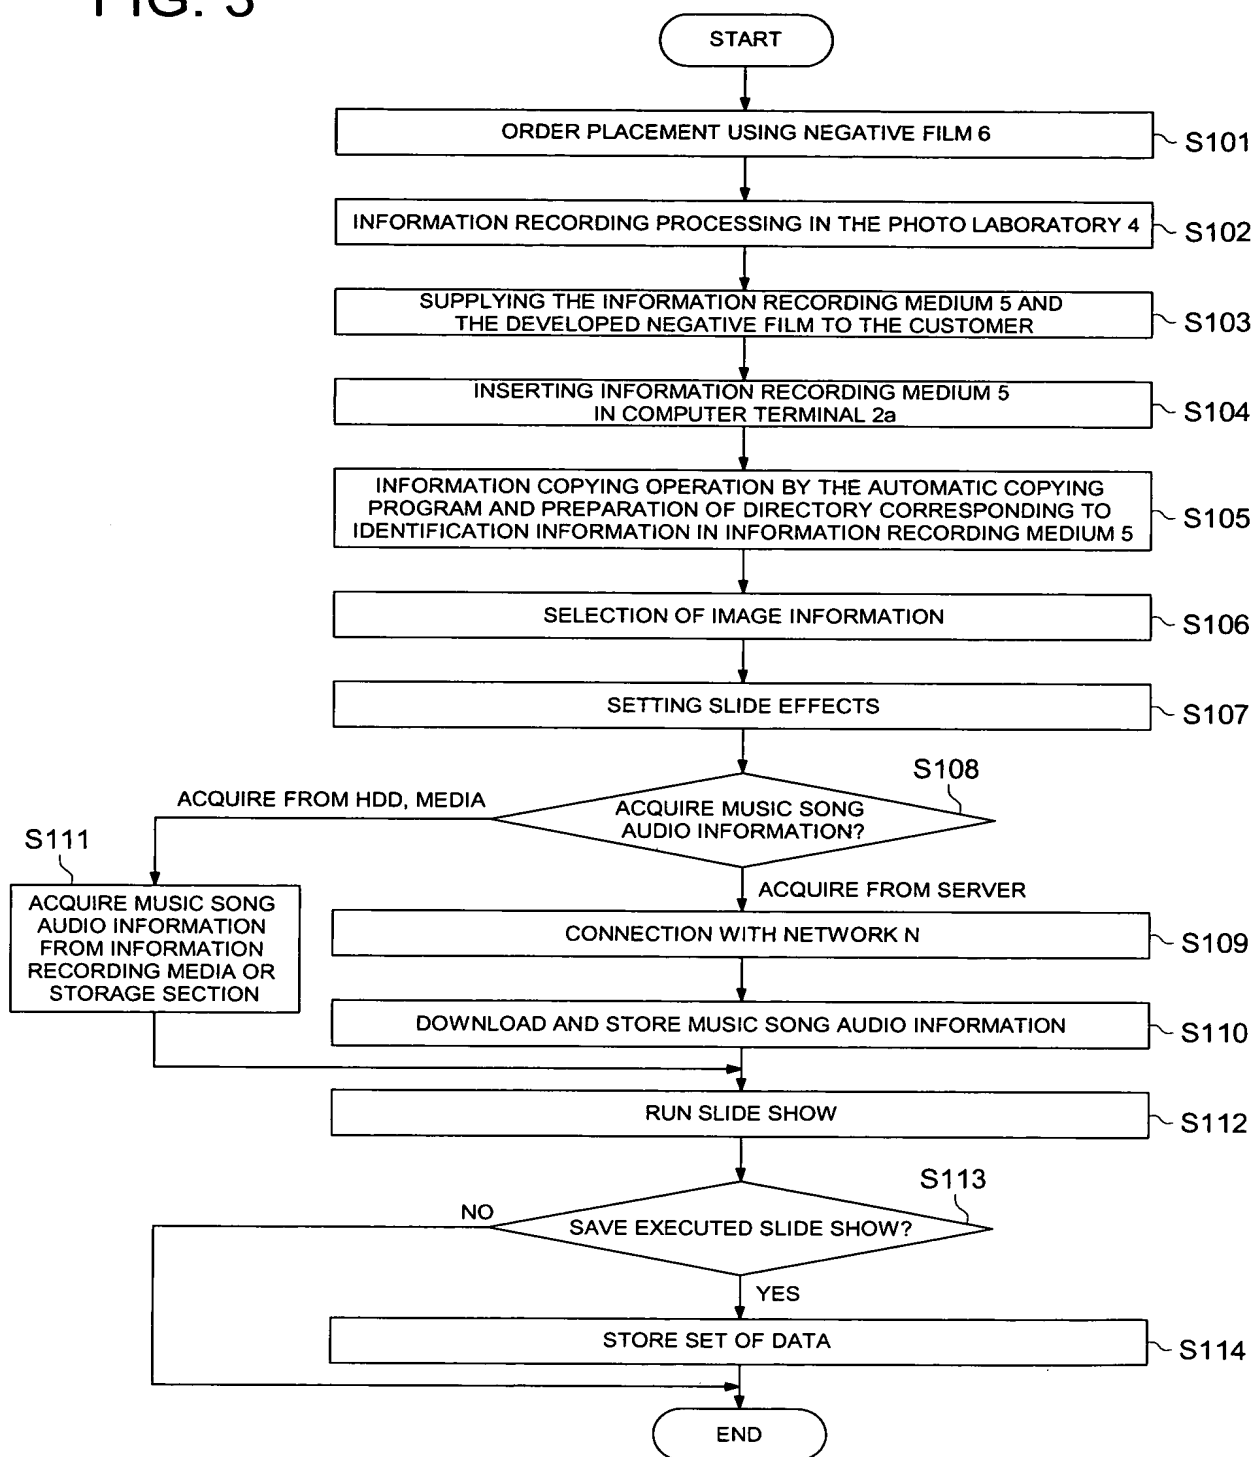


FIG. 3



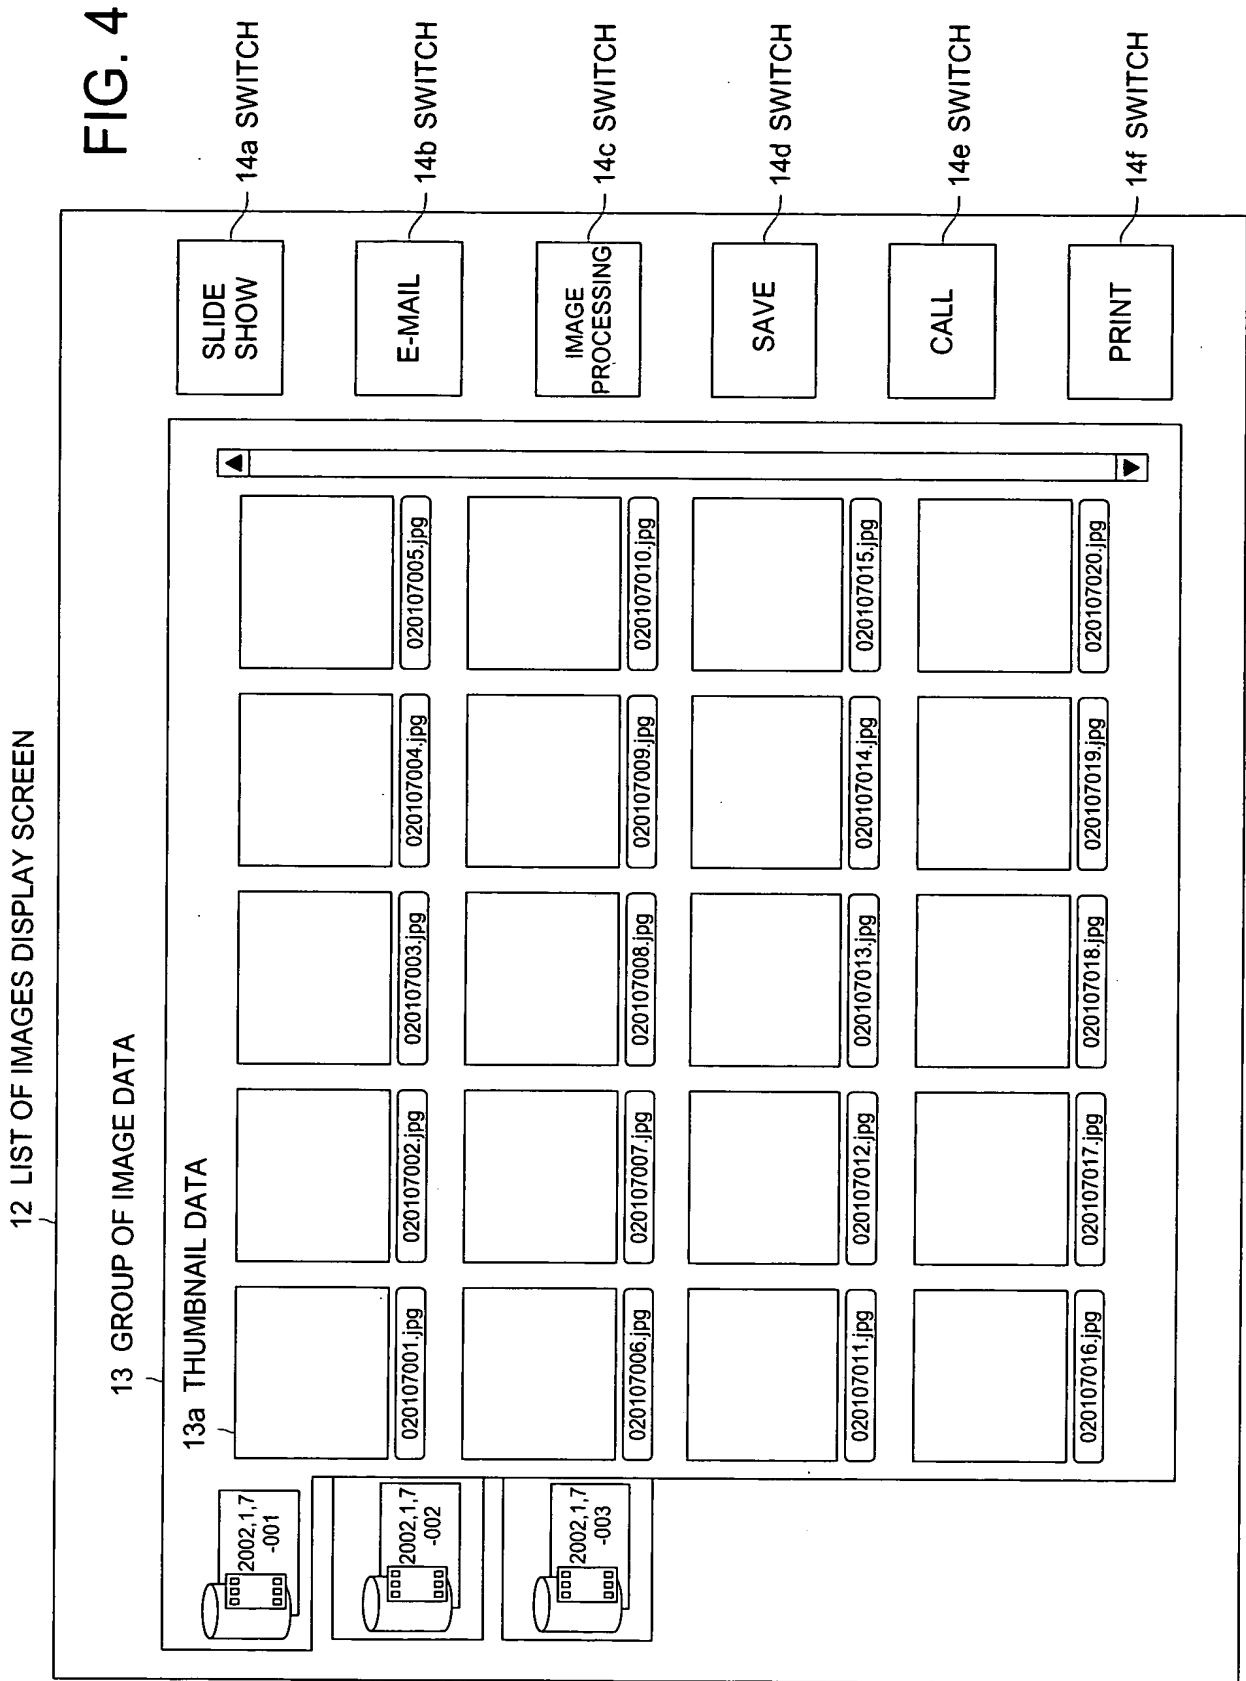


FIG. 5

15 SLIDE SHOW EDITING SCREEN

15c SELECTED IMAGE DISPLAY AREA

13 GROUP OF IMAGE DATA

13a THUMBNAIL DATA

--	--	--	--	--	--	--	--	--	--	--	--

☐ SELECT ALL

SLIDE SHOW SETTINGS

SLIDE INTERVAL

SLIDE EFFECTS

☒ REPEAT ☐ stop

BGM SETTINGS

USE BGM FROM CD

USE OTHER MUSIC DATA

☒ REPEAT ☐ stop

RETURN

SLIDE SHOW SAVE

SLIDE SHOW START

DELETE SELECT ALL

15a SLIDE SHOW SETTING AREA

15b MUSIC SONG AUDIO INFORMATION SETTING AREA

15d SLIDE SHOW SAVE SWITCH

15e SLIDE SHOW START SWITCH

10/511871

FIG. 6

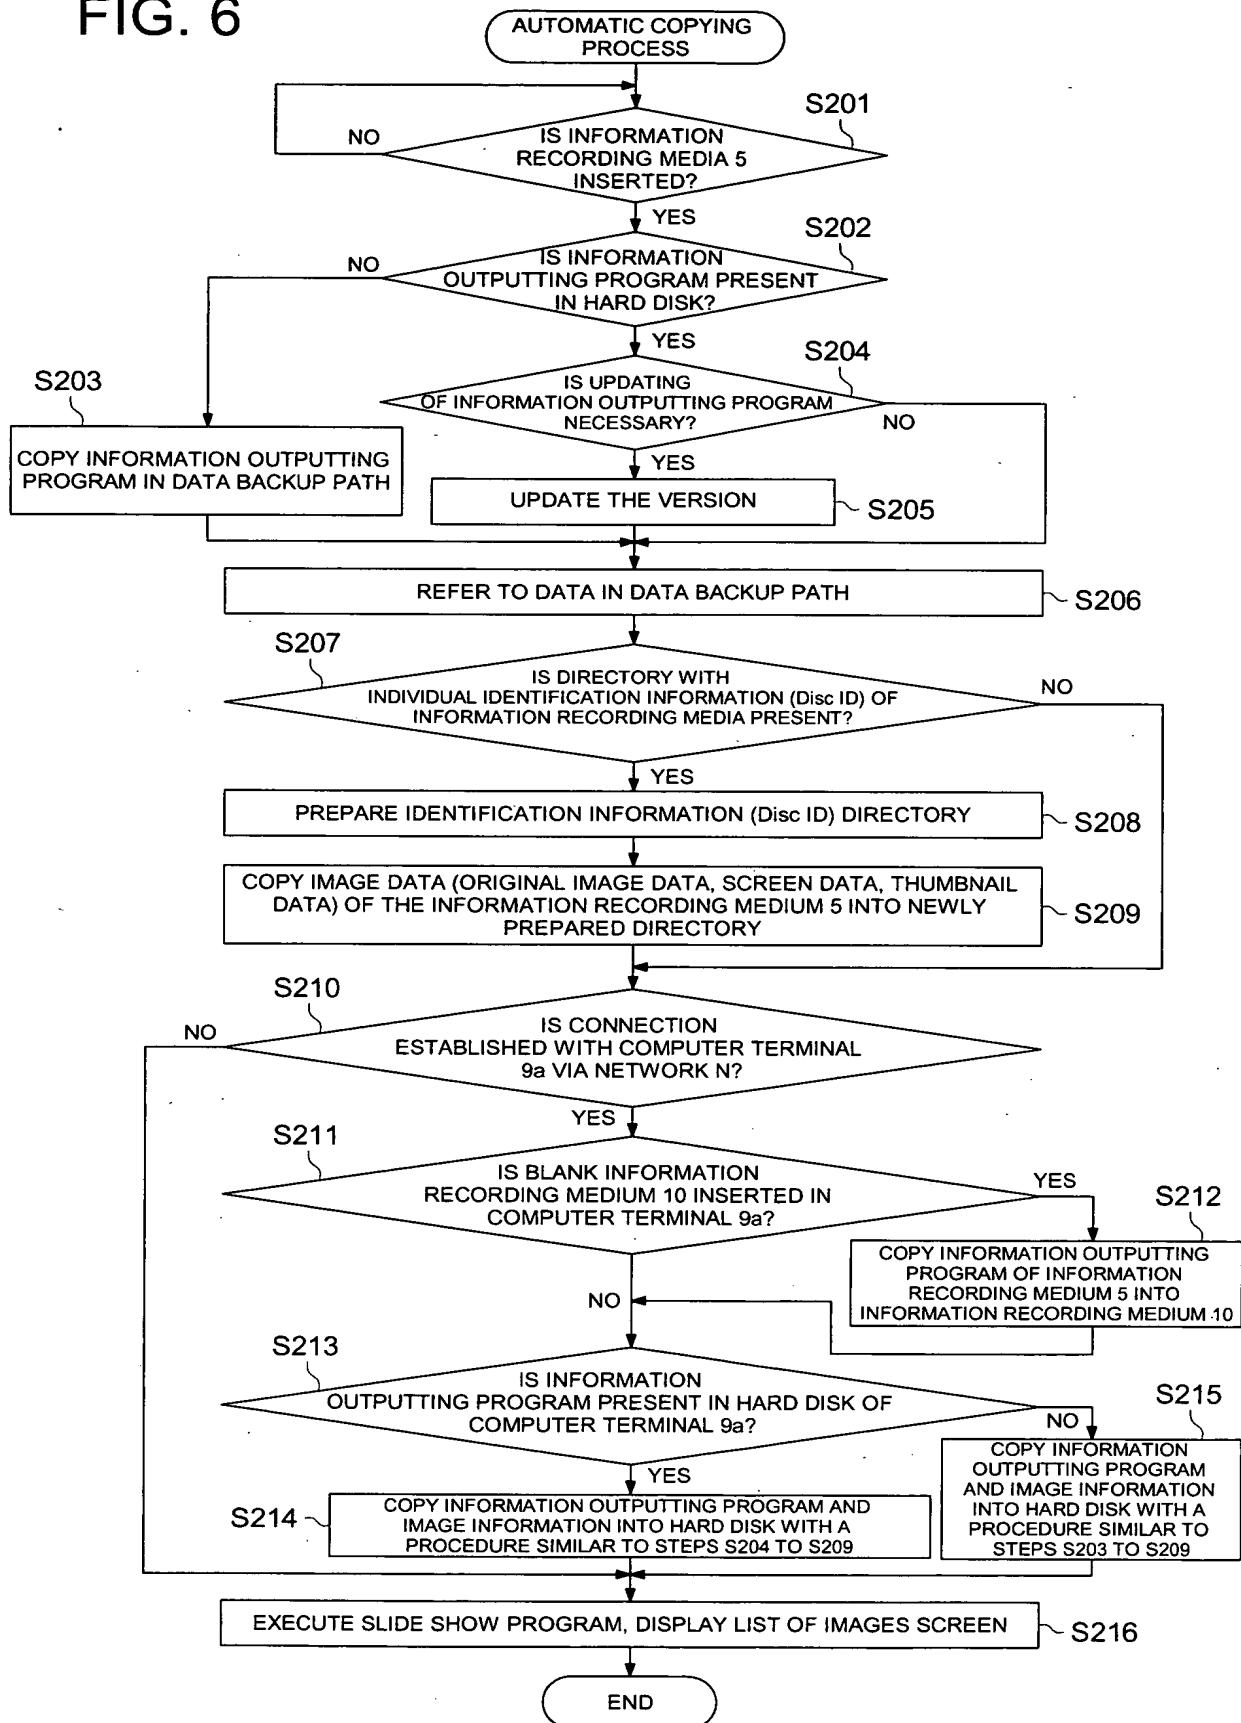


FIG. 7

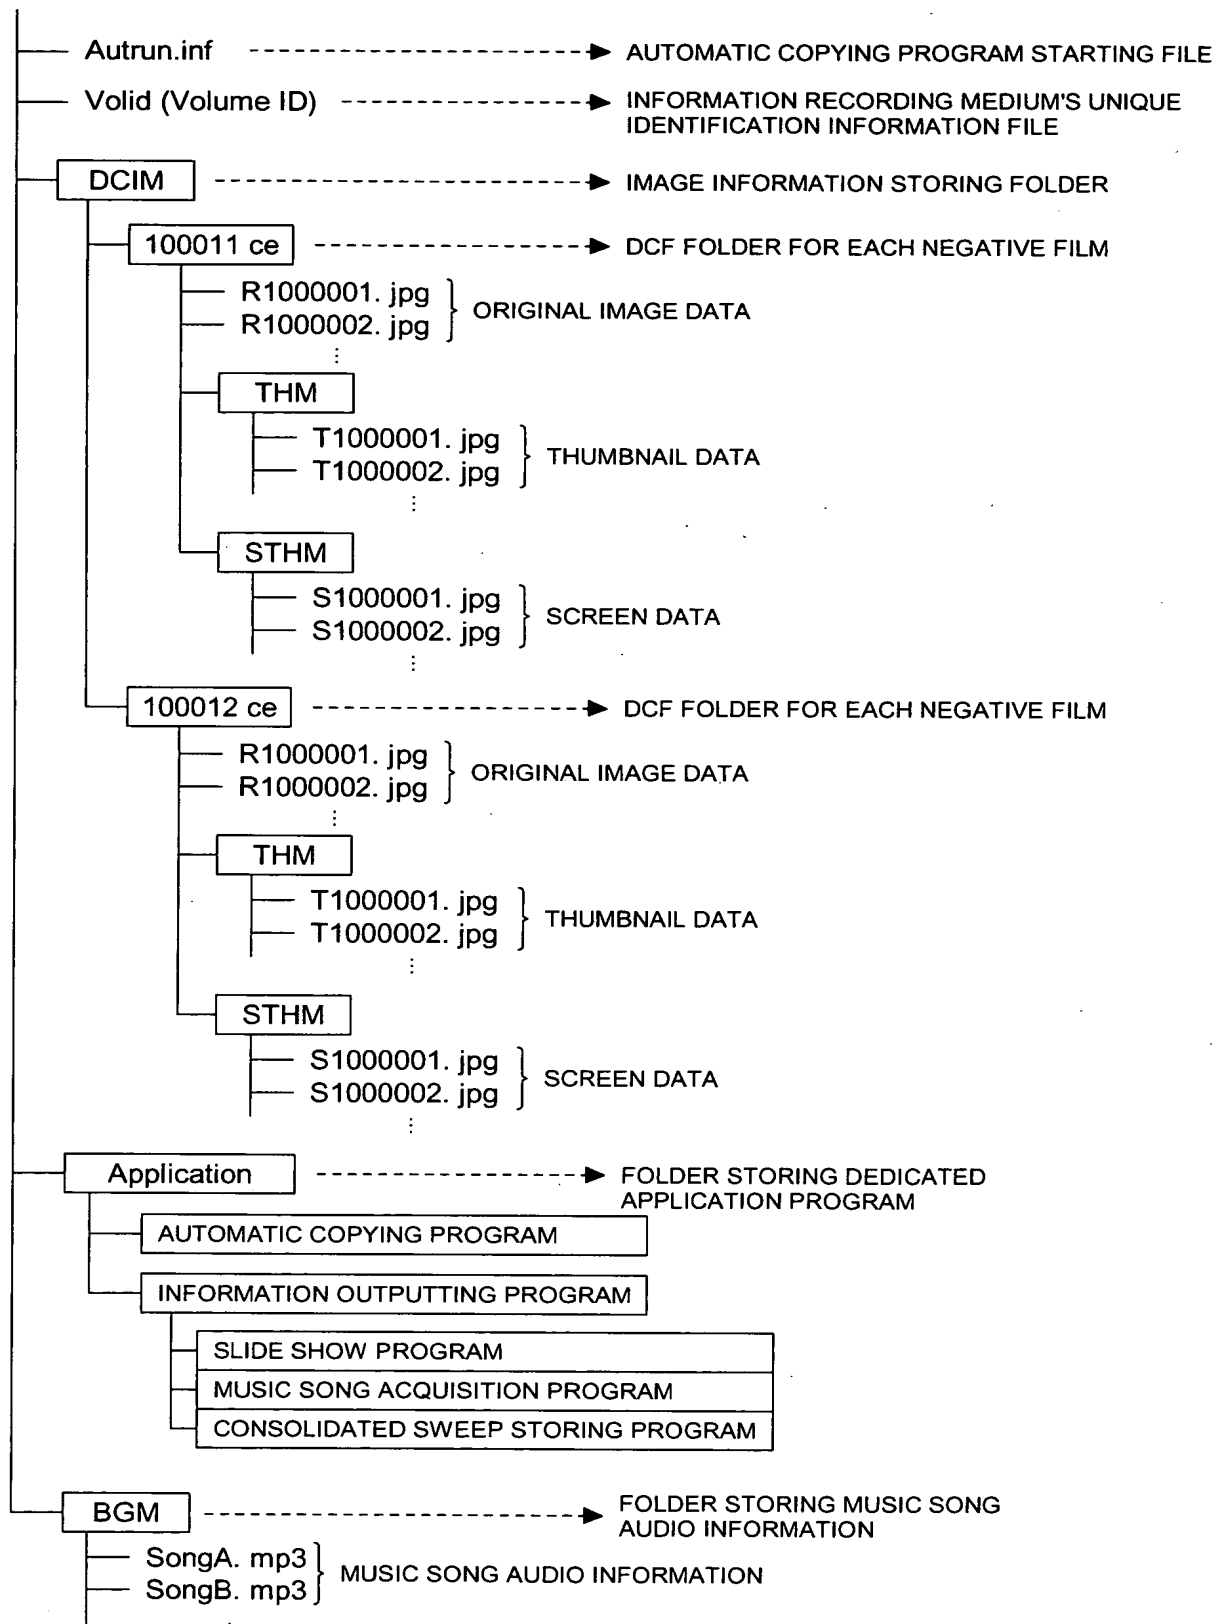


FIG. 8

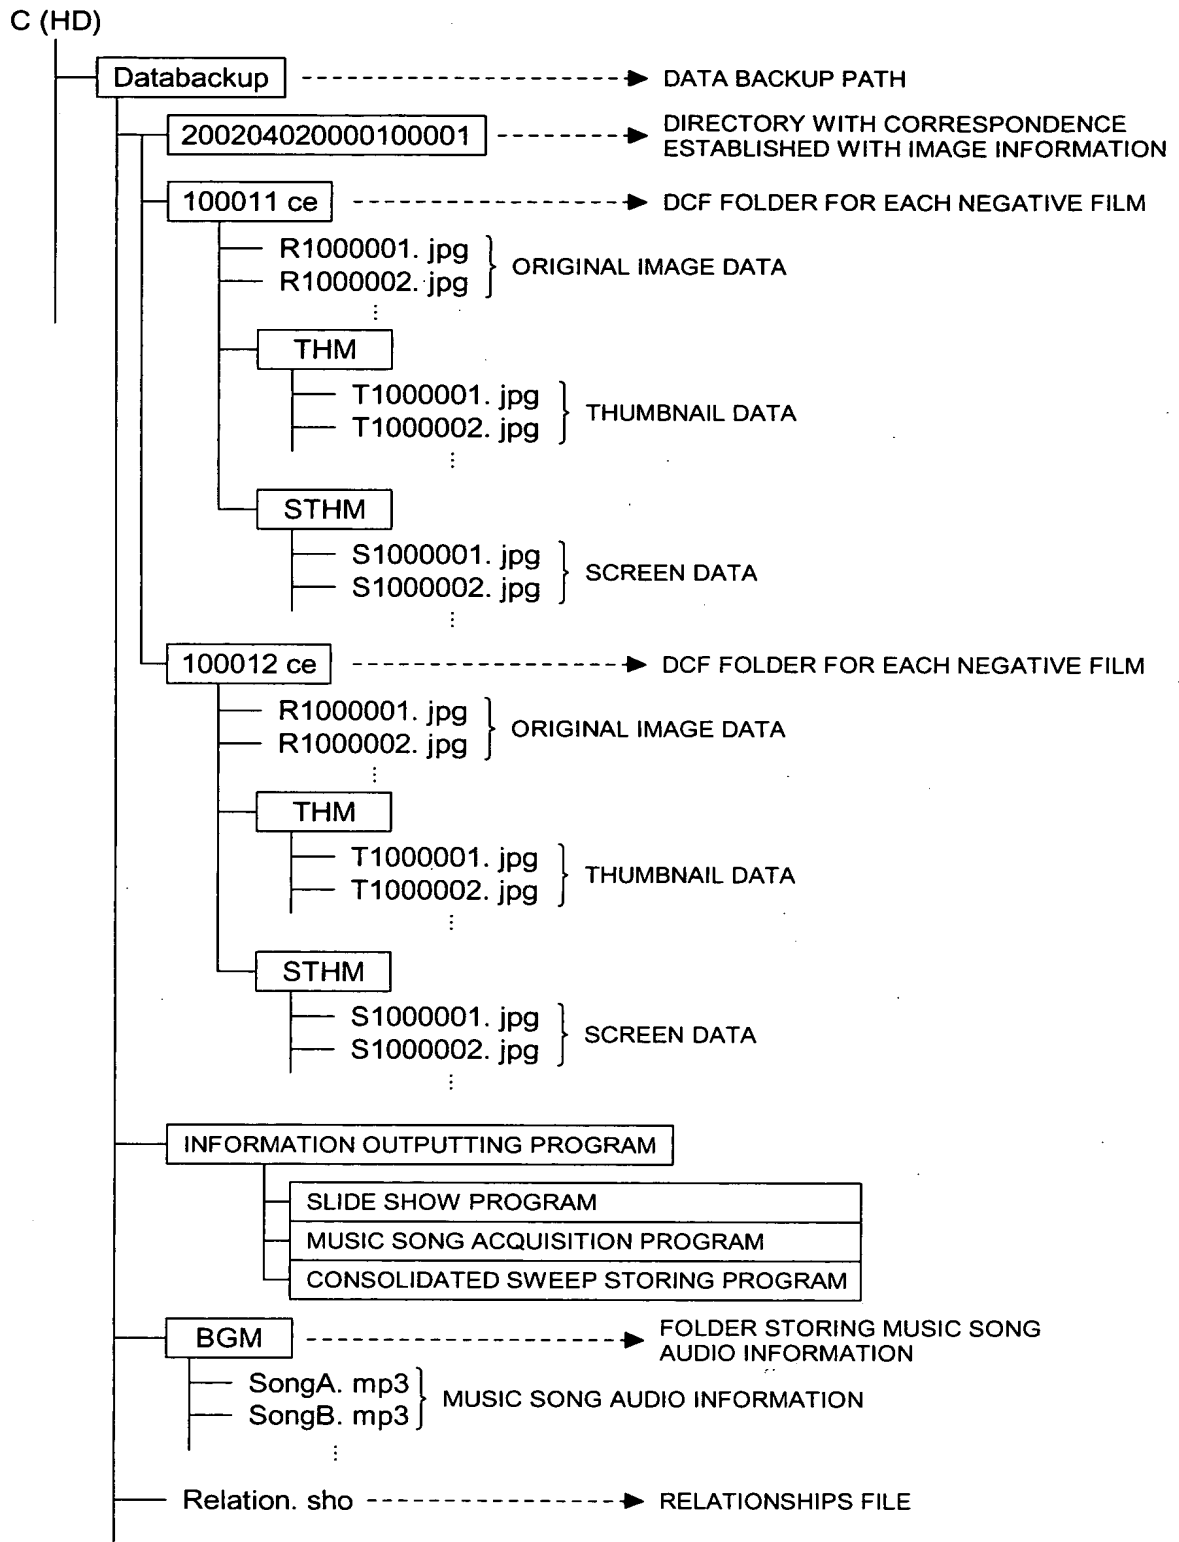




FIG. 9

